

## **Electric Fuel Valve**

The Electrimotion electric fuel valve is compatible with any Electrimotion timer. The Fuel valves are available in 1, 2, 3 and 4 pole combinations.









Large Flow Needle Jet to Needle Valve Cross Reference			
Jet Size	Needle Position	GPM @ 150psi	
10	10	0.17	
20	29	0.32	
30	40	0.5	
40	58	0.7	
50	77	0.92	
60	95	1.11	
70	120	1.32	
80	150	1.53	
90	175	1.69	
105	212	1.85	

	Small Flow Needle  Jet to Needle Valve Cross Reference			
Jet Size	Needle Position	GPM @ 150psi		
10	30	0.17		
20	85	0.32		
30	120	0.5		
40	175	0.7		
50	231	0.92		
60	285	1.11		

The valves have the ability to accept 7/16" screw in jets or an adjustable needle valve. Use the charts below to determine the GPM rate for your needle setting or jet size.

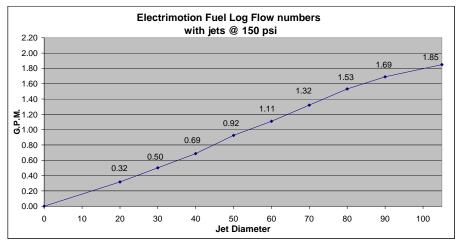

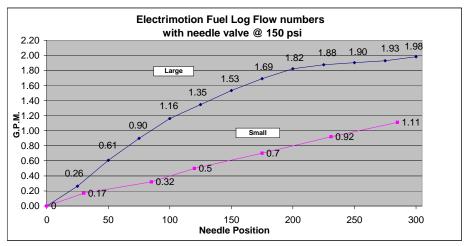

## General Warnings

IT IS THE RESPONSIBILITY OF THE PERSON INSTALLING ANY CONTROL SYSTEM COMPONENT OR KIT, YOU SHOULD NOT INSTALL OR USE IT AS COMPONENT OR KIT, YOU ARE NOT SURE HOW TO SAFELY USE THIS COMPONENT OR KIT, YOU SHOULD NOT INSTALL OR USE IT AS SUME ANYTHING. IMPROPERLY INSTALLED OR MAINTAINED CONTROL SYSTEMS ARE DANGEROUS. IF YOU ARE NOT SURE, GET HELP OR RETURN THE PRODUCT. YOU MAY OBTAIN ADDITIONAL INFORMATION AND TECHNICAL SUPPORT BY CALLING ELECTRIMOTION AT (740) 382-0251, OR VISIT OUR WES IT. AT WWW.ELECTRIMOTION. USE OF ELECTRIMOTION. USE OF ELECTRIMOTION TECHNICAL SUPPORT DOES NOT GUARANTEE PROPER INSTALLATION. YOU, OR THE PERSON WHO DOES THE INSTALLATION, MUST KNOW HOW TO PROPERLY USE THIS PRODUCT. IT IS NOT POSSIBLE OVER THE PHONE TO UNDERSTAND OR FORESEE ALL THE ISSUES THAT MIGHT ARISE IN YOUR INSTALLATION. LIBBILITY ON DEFECTIVE MERCHANDISE OR MERCHANDISE NOT CONFORMING TO MANUFACTURER'S SPECIFICATIONS IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE ITEM. RACING EQUIPMENT MUST BE MAINTAINED AND SHOULD BE CHECKED REGULARLY FOR FATIGUE, DAMAGE, AND WEAR. DO NOT OPERATE ANY VEHICLE ON UNTERSTEED CONTROL SYSTEMS!