

ELECTRIMOTION INC.
1484 DALE FORD RD.
DELAWARE, OH 43015

STARTER / TRIGGER RELAY

CONNECTION

Power lead:

Red wire to starter switch

Black wire to ground

White trigger lead:

Connects to crank trigger

Black trigger leads:

Connects to Generator connectors

If using timing controller... the male pin conn. Plugs into the gray cable going to the timing controller.

MOUNTING

Try to mount as far from plug wires as possible.

SWITCH VOLTAGE

Input from 6.0 volts – 36 volts to toggle triggers

NOTE:

DO NOT USE TO PHASE IN GENERATOR

BEST RESULTS IF GEN TIMING IS CLOSE TO PICKUP TIMING

THANKS
DAVE LEAHY

STARTER / TRIGGER RELAY HOOKUP DIAGRAM

